



for living, for life

User Manual



Model: T2932WNSTS

Your TV has a 2 Year Parts & Labour Warranty. To avail of this warranty you need to register your by entering your purchase on our website.
www.powerpointappliances.ie

To obtain the best performance and safety, please read this manual carefully. Please keep this manual for future reference.

CONTENTS

SAFETY INSTRUCTIONS	2
EXTERNAL INPUTS AND INSTALLATION	3
SIGNAL SETUP AND INSTALLATION	4
FIRST TIME INSTALLATION	5
REMOTE CONTROLLER.....	6
INSTALLATION CONTINUED	8
BASIC OPERATION	9-25
Setup	9
Picture	10
Sound	12
Channel	14
Time	21
Lock	23
Hotel	25
MULTIMEDIA OPERATION	26-29
Movie	26
Music	27
Photo	28
Text	29

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS - PLEASE READ CAREFULLY BEFORE USE.

The following safety instructions are located on the back of the TV.



DANGER OF ELECTRIC SHOCK! NEVER REMOVE THE SCREWS OF THE COVER. NO USER-SERVICEABLE PARTS IN THE DEVICE. REPAIR ONLY BY QUALIFIED SERVICE PERSONNEL.



The exclamation mark in the equilateral triangle indicates important operating and maintenance instructions



The flash in the equilateral triangle indicates high voltage in the device, which can lead to electric shock

Please follow the instructions below:

- ❖ Do not use this TV near water.
- ❖ Only clean the device with a damp cloth.
- ❖ Do not block any ventilation openings.
- ❖ Set up the television in accordance with the supplied quick guide and these operating instructions.
- ❖ Lay the power cable so that it cannot be stepped on or pinched. Pay special attention to the plug and the point at which the cable is led out of the television.
- ❖ Do not let the power cord hang over the edge of the table.
- ❖ Disconnect the TV from the mains if there is a thunderstorm or if it is not used for a long period



WARNING! EXPOSE THE TELEVISION TO AVOID FIRE OR ELECTRIC SHOCK OR RAIN OR MOISTURE. THE TELEVISION SHOULD NEVER BE EXPOSED TO SPLASH / DRIP WATER AND NO OBJECTS FILLED WITH LIQUID ON THE TELEVISION

NOTE: Open flames (such as candles) should never be placed on the TV

 
Smells from the TV

New TVs can cause unusual smells when they are switched on for the first time.

Due to the manufacturing process of the components, the television and other electronic products may have parts that produce odors when they are first turned on and warmed up. The smell usually disappears after a few days of use and does not return.

This is normal and occurs with many electronic devices. Ensure that there is sufficient ventilation in and around the device so that the smell can disappear.

EXTERNAL INPUTS AND INSTALLATION

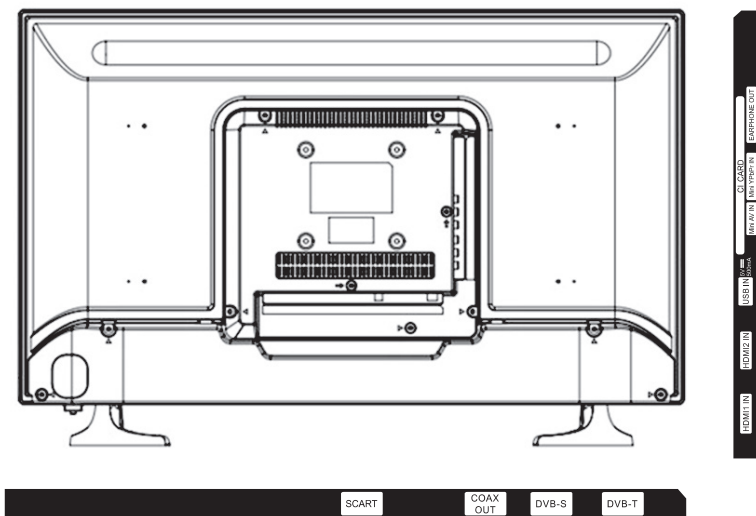

DVB-S: Connect Satellite Dish to receive Free to Air Satellite Channels

DVB-T: Connect Aerial for Irish Digital TV Channels

HDMI1/HDMI2: Connect HDMI input signal from signal source such as a set top box, Games Console,

USB: USB support multimedia playback and software upgrade

Earphone Out: Audio output from TV through Earphone

SCART: AV input from a device like VCR

Coax Out: Digital Audio Output from TV

Mini AV In: Mini AV input from video playback device

Mini YPbPr In: Mini component input from a video playback device

CI Slot: Insert CI card for Digital TV (**Not for use in Ireland**)

SIGNAL SETUP AND INSTALLATION

Antenna/Satellite Cable Connection

NB. The best Irish Digital Saorview picture and signal quality will be received by using an UHF aerial fitted on the outside of your home.

Areas differ in signal quality strength, it is recommended to contact your local TV & Satellite installation company for best results.

- a. Connect the Plug of your aerial cable to the aerial input **(DVB-T)** to the rear of the TV to receive Irish Digital Saorview TV reception.
- b. Connect the Plug of your Satellite cable to the satellite input **(DVB-S)** to the rear of the TV to receive Free to air Satellite Channels.

FIRST TIME INSTALLATION

 
Once your Aerial & Satellite cables are connected power on your TV.

You will see this display.

Language

Press ◀ / ▶ button to select the language to be used for menus and message.

Press ENTER to move forward to the next page.

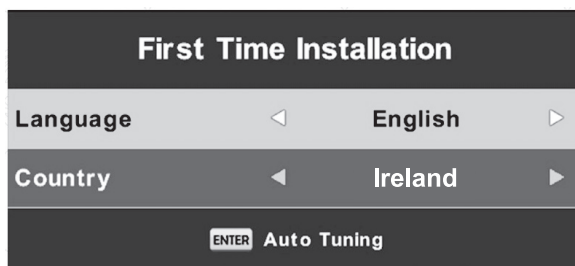

SOURCE

Press **INPUT** button to display the input source list

 
Press ▼ / ▲ or **OK** button to select the input source you want

Press **OK** button to enter the input source

Press **EXIT** button to quit



REMOTE CONTROLLER

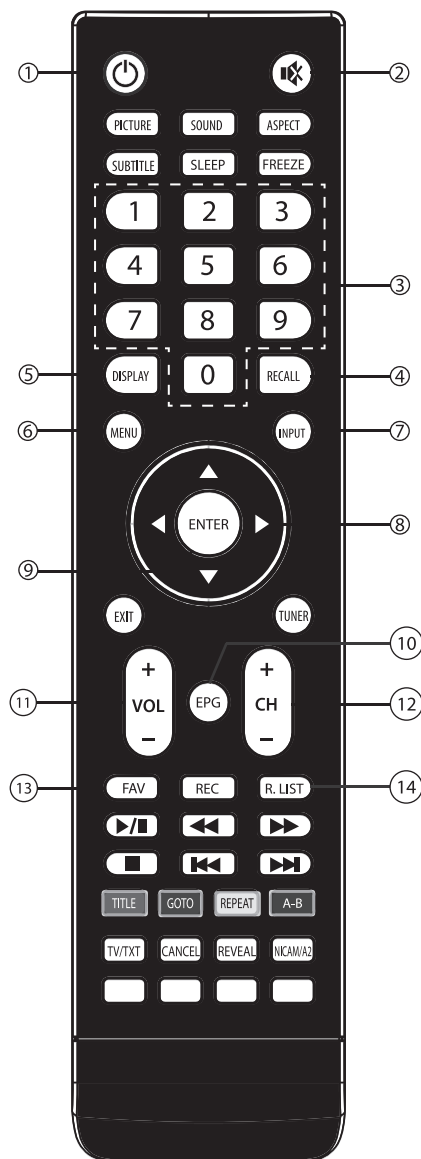

1. POWER (⏻)

Press to turn the TV on or off (Standby).

2. MUTE (🔇)

Press to mute or restore the volume.

3. PROGRAM SELECT (0-9)

Press to select the TV channel directly.

4. RECALL

Press to return to the previously viewed channel/ Press to back in previous state (Optional).

5. DISPLAY

Press to display relevant information such as screen format, source, etc.

6. MENU

Press to enter or exit from the TV menu.

7. INPUT

Press to select the input source mode.

8. UP/DOWN/LEFT/RIGHT Cursor (▲/▼/◀/▶)

Navigate the menu.

9. ENTER

Press to confirm and execute the selection.

10. EPG

Display the EPG interface in DTV mode

11. VOLUME UP/DOWN (V+/V-)

Press to adjust the volume.

12. PROGRAM UP/DOWN (CH+/CH-)

Press to select previous/ next channel.

 
13. FAV

Press to hold/ fav the current screen without update & change. Press again to release the freeze state (RF Source only.)

14. R. LIST

Press to select USB mode directly (Optional).

REMOTE CONTROLLER

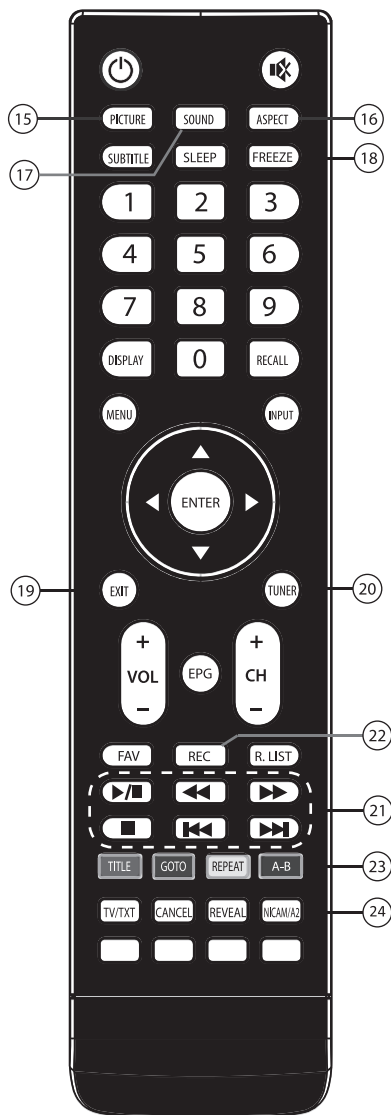

15. Picture Mode (P.M.)

Press to select the desired picture mode.

16. ASPECT

Press to select the desired picture aspect ratio.

17. Sound Mode (S.M.)

Press to select the desired sound mode.

18. CHN LIST

Press to go to channel list.

19. EXIT

Press to exit default browser.

20. TUNER

Press to toggle between DVB-T and DVB-S

21. USB Play Control Buttons *

Play & Pause (▶||)

Press to stop the running media file.

Stop (■)

Press the stop button to exit full-screen playback, access to the preview.

Fast Backward Button (◀◀)

Press to fast reverse.

Fast Forward (▶▶)

Press to fast forward.

Previous (◀◀)

Press to play the previous file.

Next (▶▶)

Press to play the next file.

22. TV/RADIO

Switch between TV and Radio

23. Color Buttons (R,G,Y,B)

TITLE: Shows the title of the media

GOTO: Go to the desired time

REPEAT: Repeat the media playback

A-B: A-B Repeat function enables playback to a specific section repeatedly by setting the start point (A) and end point (B)

24. Teletext Keys

TV/TXT: Load or exit teletext menu

CANCEL: Back to TV Program while searching a teletext page

 
REVEAL: Display or hide hidden information

NICAM/A2: Select the desired sound playback depending on the channel

Installation continued

Auto Tuning

The Satellite tuning is first. Please press ENTER when you see the message below.

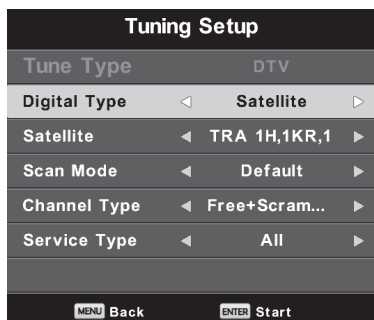

Next you will get the message below. If you want to save time and obtain a preset list of Satellite channel select YES by pressing ◀. This will take a minute and your channel list will appear.

If you want to tune the satellite channels manually Press NO ▶ to refer further down the user manual for further information on manual tuning and channel setting.



 
Next Press the Tuner button on the remote. This will move the TV the Irish Channel area. Now press the Menu button and you will get the message below. Press the ▼ to highlight Auto Tuning and press enter. The TV will now tune Irish Digital channels from the Saroview platform.



BASIC OPERATION

Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio, then press **Enter** button to enter sub-menu. Press ▼ / ▲ button to select aspect ratio. (Available options are: Auto, 4:3, 16:9, Zoom1, Zoom2)

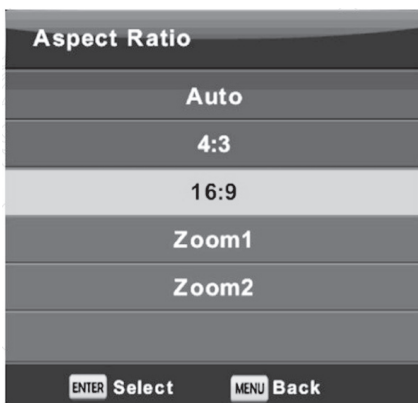

Blue Screen

Press ▼ / ▲ button to select Blue Screen, then press **Enter** button to select On or Off.

First Time Installation

Press ▼ / ▲ button to select First time installation, then press **Enter** button to enter.

Reset

Press ▼ / ▲ button to select Reset, then press **Enter** button to enter sub-menu.

Software Update (USB)

Press ▼ / ▲ button to select Software Update (USB), plug your USB device in the USB slot, then press **Enter** button to update the right software.

HDMI CEC

Press ▼ / ▲ button to select HDMI CEC, then press **Enter** button to enter the sub-menu.

HDMI CEC Press ◀ / ▶ button to turn the HDMI CEC On or Off.

HDMI ARC Press ◀ / ▶ button to turn the HDMI ARC On or Off.

Auto Standby Press ◀ / ▶ button to turn the Auto Standby On or Off.

Device List Press **Enter** button to open the main menu of device.

 


BASIC OPERATION

Picture

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **PICTURE** in the main menu

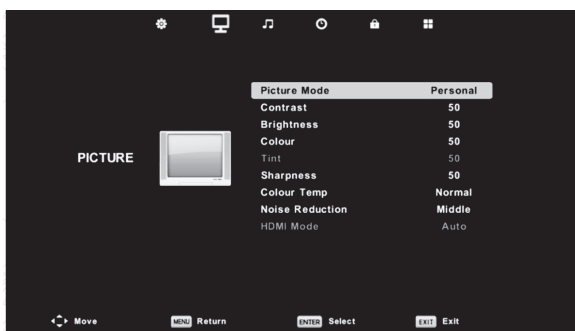

Press ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.

Press **OK** button to adjust.

After finishing your adjustment, Press **MENU** button to save and return back to the previous menu

Picture Mode

Press ▼ / ▲ button to select Picture Mode, then press **OK** button to enter sub-menu.

You can change the value of contrast, brightness, color, sharpness and tint when the picture is in

Personal mode.

TIPS: You can press PMODE button to change the Picture Mode directly



BASIC OPERATION

Contrast/ Brightness/ Color/ Tint / Sharpness

Press ▼ / ▲ button to select option, then press ◀ / ▶ button to adjust.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Brightness Adjust the optical fiber output of the entire picture, it will affect dark region of the picture.

Color Adjust the saturation of the picture based on your own liking

Tint Use in compensating color changed with the transmission in the NTSC code.

Sharpness Adjust the peaking in the detail of the picture

 
Color Temp

Change overall color cast of the picture

Press ▼ / ▲ button to select Color Temperature, then press **OK** button to enter sub-menu.

Press ▼ / ▲ button to select Color Temperature. (Available Picture mode: Cold, Normal, Warm).

Change the value of red, green and blue when the color temperature is in **User** mode

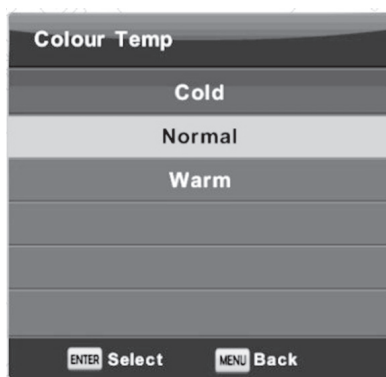

Cold Increase the blue tone for the white.

Normal Set to default color temperature.

Warm Increase the red color for the white

Noise Reduction

Filter out and reduces the image noise to improve picture quality.

Press ▼ / ▲ button to select Noise Reduction , then press **OK** button to enter sub-menu.

BASIC OPERATION



Off Select to turn off video noise detection.

Low Detect and reduce low video noise.

Middle Detect and reduce moderate video noise.

 
High Detect and reduce enhanced video noise.

Default Set as Default.

Sound

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **SOUND** in the main menu

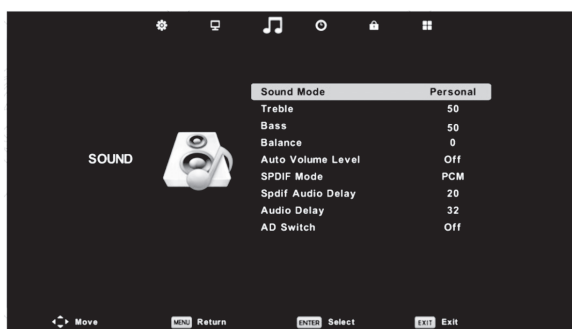

Press ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.2.

Press **Enter** button to adjust.

After finishing your adjustment, Press **Enter** button to save and return to the previous menu

BASIC OPERATION

Sound Mode

Press ▼ / ▲ button to select Sound Mode, then press Enter button to enter sub-menu.

Press ▼/▲ button to select.



You can change the value of Treble and Bass when the sound is in Personal mode.

TIPS: You can press **S.MODE** button on the remote control to change the Sound Mode directly.

Standard Produces a balanced sound in all environments.

Music Preserves the original sound. Good for musical programs.

Movie Enhances treble and bass for a rich sound experience.

Sports Enhances vocals for sports.

Personal Select to customize sound settings

Note: The treble and bass are only available in **Personal** mode, you can adjust them as you like.

Balance

Press ▼ / ▲ button to select option, Press ◀ / ▶ button to adjust.

Auto Volume level

Press ▼ / ▲ button to select Auto Volume Level, then press ◀ / ▶ button to select On or Off.

SPDIF Mode

Press ▼ / ▲ button to select SPDIF Mode, then press ◀ / ▶ button to select Off / PCM / Auto

AD Switch

Press ▼ / ▲ button to select AD Switch, then press ◀ / ▶ button to select On or Off.

Amblyopia function for the blind, the tracks will be mixed describe the current screen .

It needs code stream to support.

Note:

Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.

Auto Volume: This item is used for reducing the difference between channel and program's volume automatically.

BASIC OPERATION

Channel

Press **MENU** button to display the main menu.

 
Press **◀ / ▶** button to select **CHANNEL** in the main menu



1. Press **▼ / ▲** button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu

Auto Tuning

Press **▼ / ▲** button to select Auto Tuning, then press **Enter/▶** button to enter

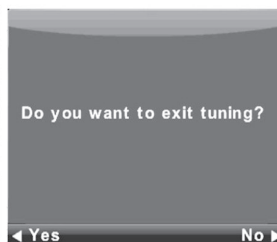

BASIC OPERATION

ATV Manual Tuning

Current CH>

Set the channel number.

Color System>

Select the color system

Sound System>

Select the Sound system

Fine-Tune>

Adjust the frequency of the channel finely.

(Available System: AUTO, PAL , SECAM)

Search>

Start searching channel

 


DTV

Press ▼ / ▲ button to select Manual Tuning, then press **Enter** button to enter sub-menu.

Press ◀ / ▶ button to select channel, then press **Enter** button to search program.

Manual Tuning

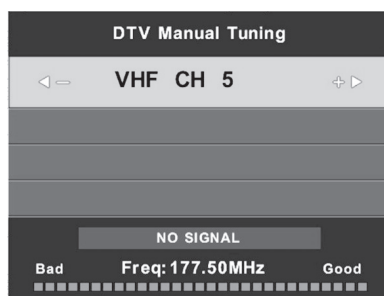

Program Edit

Press ▼ / ▲ button to select Program Edit, then press **Enter** button to enter sub-menu

The three ● ● ● colored key is the shortcut key for programming the channel

First press ▼ / ▲ to highlight the channel you want to select, then:



BASIC OPERATION

Press the **Red** button to delete the program in the list.

Press the **Yellow** button to move the channel in favorite list.

Press the **Blue** button to skip the selected channel.

Press Fav button to add or remote the channel to your favorite list.

 
(Your TV set will skip the channel automatically when using

CH+/- to view the channels.)

Schedule List

Press **▼ / ▲** button to select Schedule List, then press **Enter** button to enter sub-menu.

It is available in source

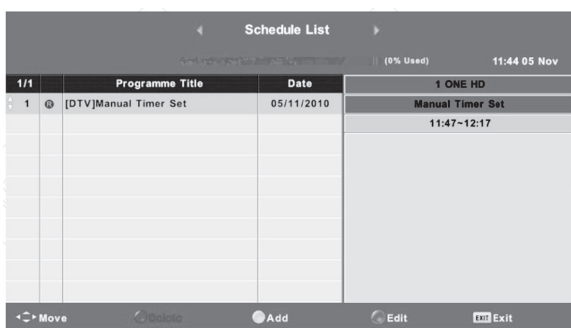

Press the **YELLOW** button to enter the interface below:



 
When the time appointment is conflict, it will produce a warning message:

BASIC OPERATION




Signal Information

Press ▼ / ▲ button to select **Signal Information**, press the **Enter** button to see the detail information about the signal. Only available when there is signal in DTV.

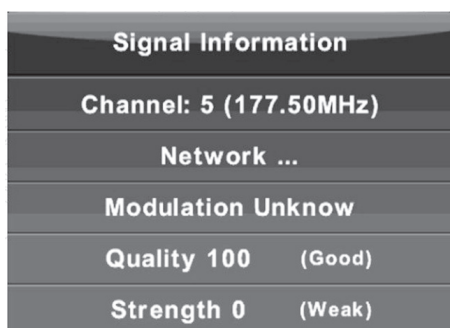

The CHANNEL List in Satellite Source

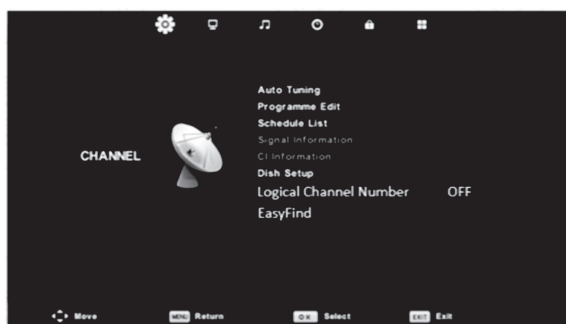 

BASIC OPERATION

Auto Tuning

Press ▼ / ▲ button to select Auto Tuning, then press **Enter/▶** button to enter

Tuning Setup

Country	◀	Germany	▶
Satellite	◀	01 HOTBIRD 6...	▶
Scan Mode	◀	Blind Scan	▶
Channel Type	◀	Free+Scramble	▶
Service Type	◀	All	▶

OK Start
MENU Back

Dish Setup

Press ▼ / ▲ button to select Dish Setup, and then press **Enter/▶** button to enter.

Press MENU button to call out the main menu.

Highlight “Channel” using navigation buttons and press OK to enter it.

Then highlight “Dish Setup” and press OK to enter it.

Press LEFT/RIGHT navigation button to highlight Left, Middle or Right column.

Press EXIT button to return.

Dish Setup

Satellite	Ku_HOTBIRD 6,7A,8
001 013.0 E Ku_HOTBIRD 6,7A,8	LNB Type 09750/10600
002 019.2 E Ku_ASTR A 1H,1KR,1L,1M	LNB Power 13/18V
003 028.2 E Ku_ASTR A 2A,2B,2D	22KHz Auto
004 023.5 E Ku_ASTR A 1E,1G,3A	Toneburst None
005 353.0 W Ku_NILESAT 101, 10	DiSEqC1.0 None
006 007.0 E Ku_EUTELSAT W3A	DiSEqC1.1 None
007 010.0 E Ku_EUTELSAT W1	Motor None
008 026.0 E Ku_BADR-2,3,4/EURO	

Quality

EPG Transponder
OK Select
Edit

EXIT Exit
Delete
Add
Scan

BASIC OPERATION

A. When the “Satellite” column is highlighted:

(1) Press **YELLOW** button to enter Add menu.

Satellite Name

Press **RIGHT** navigation button to enter rename page.

Use navigation buttons to complete a new name.

Longitude Direction

Press **LEFT/RIGHT** navigation button to select desired option.

Longitude Angle

Press **LEFT/RIGHT** navigation button to move the cursor and press number buttons on remote control to input desired value.

Band

Press **LEFT/RIGHT** navigation button to select desired option.

(2) Press **GREEN** button on remote control to enter **Edit** menu.

The operations of Edit menu are the same as Add menu.

(3) Press **BLUE** button on remote control to enter Scan menu.

Press **UP/DOWN** navigation button to highlighted desired item.

Press **RIGHT** navigation button to select desired Scan Mode, Channel Type and Service Type.

(4) Press **RED** button to delete

Press **EPG** button to switch satellite and Transponder.

B. When the “Transponder” (Middle) column is highlighted:

(1) Press **YELLOW** button on remote control to enter Add menu.

Frequency

Press **LEFT/RIGHT** navigation button to move the cursor and press number buttons on remote control to input desired value.

Symbol (ks/s)

Press **LEFT/RIGHT** navigation button to move the cursor and press number buttons on remote control to input desired value.

Polarity

Press **LEFT/RIGHT** navigation button to select desired option

(2) Press **GREEN** button on remote control to enter Edit menu

The operations of Edit menu are the same with Add menu.

(3) Press **BLUE** button on remote control to enter Scan menu.

Press **UP/DOWN** navigation button to highlighted desired item.

Press **LEFT/RIGHT** navigation button to select desired Scan Mode, Channel Type and Service Type

BASIC OPERATION

C. When the “Ku_ASTRA...” (Right) column is highlighted:

LNB (Low Noise Block) Type

Press LEFT/RIGHT navigation button to enter submenu. Then use UP/DOWN navigation button to select desired option.

LNB Power

Press LEFT/RIGHT navigation button to select desired option.

22 kHz

Press LEFT/RIGHT navigation button to select desired option.

Toneburst

Press LEFT/RIGHT navigation button to select desired option.

DisEqc1.0 (Digital Satellite Equipment Control)

Press LEFT/RIGHT navigation button to select desired option.

DisEqc1.1

Press LEFT/RIGHT navigation button to select desired option.

Motor

Press LEFT/RIGHT navigation button to select desired option

EPG

Press EPG in the remote control to record the programs.

7 Day TV GUIDE			
12:00 - 12:59 05 Nov 2010		Sports	Age 09
Another high octane hour of ANDRA Drag Racing only on ONE. The Rocket Allstars fire up at the Sydney Dragway for another action packed Friday Night on the quarter mile. #bJ(¶eo © Ten]w " TD3C4 yÿÿheTEDU_iit(U\ ÊÿXJkfv\$y\$©W3#ril»VTC33»X3			
[phkr] --}tkg]e[			
05 Nov 2010 12:03:58		05 Nov 2010	
1 ONE HD	12:00-12:59	Drag Racing: ANDRA Pro Series	Now
2 AFD0, 4:3	12:59-15:00	Rugby: Grand Slam Tour 2009	Next
3 AFD1, 16:9	15:00-15:30	Sports Tonight Late	
4 AFD1, 4:3	15:30-16:01	MVP	
5 AFD2, 16:9	16:01-16:31	Real NBA	
6 AFD2, 4:3	16:31-17:01	Omnisport	
7 AFD3, 16:9	17:01-20:00	Football: Arsenal TV	
8 AFD3, 4:3	20:00-21:00	Football: Bundesliga Weekly Highlights	
Record Remind Prev Day Next Day Move View InfoDetails EXITExit			

Press UP/DOWN navigation button to select preferred program.

Press LEFT/RIGHT navigation button to switch between left column and right column.

When a program is highlighted (cursor moved to Right column):

Press **RED** button to record program.

Press **GREEN** button repeatedly to set a reminder.

Press **YELLOW** button to display program guide of previous day.

Press **BLUE** button to display program guide of next day.

BASIC OPERATION

Time

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **TIME** in the main menu.



Press ▼ / ▲ button to select the option that you want to adjust in the **TIME** menu.2.

Press **Enter** button to adjust.

After finishing your adjustment, Press **Enter** button to save and return to the previous menu

Off Time Press ◀ / ▶ button to select On/Off

On Time Press ◀ / ▶ button to select On/Off

 
Time Zone Press ▼ / ▲ button to select Time Zone, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ / ◀ / ▶ button to select time zone



BASIC OPERATION

Sleep Timer

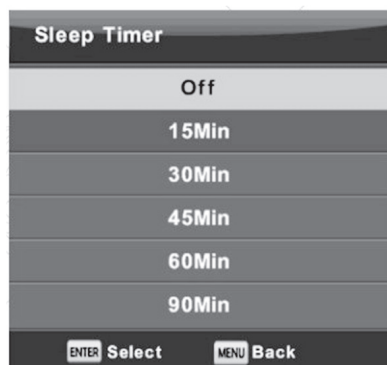

Press ▼ / ▲ button to select Sleep Timer, then press **Enter** button to enter sub-menu.
Press ▼ / ▲ button to select.

(Available options are:
Off, 10min, 20min, 30min, 60min, 90min,
120min, 180min, 240min).

Auto Standby



Press ▼ / ▲ button to select Auto Standby, then press ENTER button to enter sub-menu

Press ▼ / ▲ button to select

Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically. If you do any operation, it will reset time.

OSD Timer



Press ▼ / ▲ button to select OSD Timer, then press ENTER button to enter sub-menu

 
Press ▼ / ▲ button to select

BASIC OPERATION

Lock

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **Lock** in the main menu

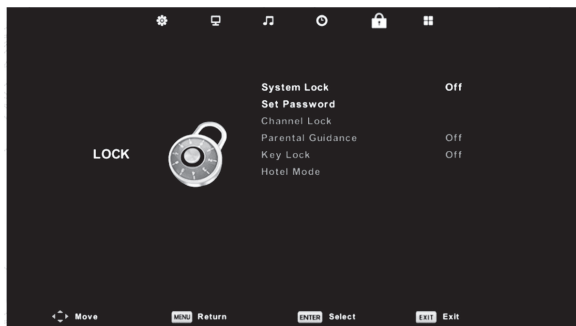

Press ▼ / ▲ button to select the option that you want to adjust in the **LOCK** menu.

Press **Enter**/◀ / ▶ button to adjust.

After finishing your adjustment, Press **MENU** button to return back to the previous menu



System Lock

Press ▼ / ▲ button to select System Lock,
Then press **ENTER** button to make following
four options valid.

Default Password is 0000, if you forget what
you set, please call service center.



Set Password

Press ▼ / ▲ button to select Set Password,
then press **Enter** button to enter sub-menu to
set new password.

BASIC OPERATION

Channel Lock



Press ▼ / ▲ button to select Channel Lock
then press **Enter** button to enter sub-menu to select.
Press **GREEN** button to lock or unlock the channel.

Parental Guidance



 
Press ▼ / ▲ button to select Parental Guidance,
then press **Enter** button to enter sub-menu to
select the number of age which is suitable for
your children.

Key Lock

Press ▼ / ▲ button to select Key Lock, then press ◀ / ▶ button to select Off or On.
When Key Lock's statue is on, you can't use the Key panel button.

BASIC OPERATION

Hotel

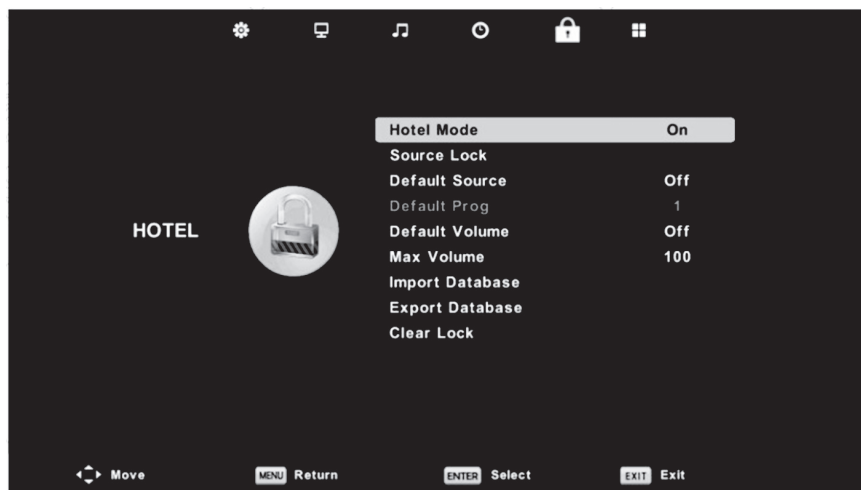

Press ▼ / ▲ button on the remote control to select hotel mode in the **Lock** menu.

Press **Enter** button on the remote control to enter the sub-menu.

After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Hotel Mode

Press ▼ / ▲ button to select Hotel Mode, then press ◀ / ▶ button to select on or off.

Source Lock

Press ▼ / ▲ button to select Source Lock to lock the source you want, then press **Enter** button to enter sub-menu to select.

Default Source

Press ▼ / ▲ button to select Default Source, then press **ENTER** button to enter sub-menu to select.

Default Prog

Press ▼ / ▲ button to select Default Prog, then press ◀ / ▶ button to adjust. It is available when the default source is TV.

 
Max Volume

Press ▼ / ▲ button to select Max Volume, then press ◀ / ▶ button to adjust.

Clear Lock

Press ▼ / ▲ button to select Clear Lock, then press **Enter** button to clear the setting you have done before

MULTIMEDIA OPERATION

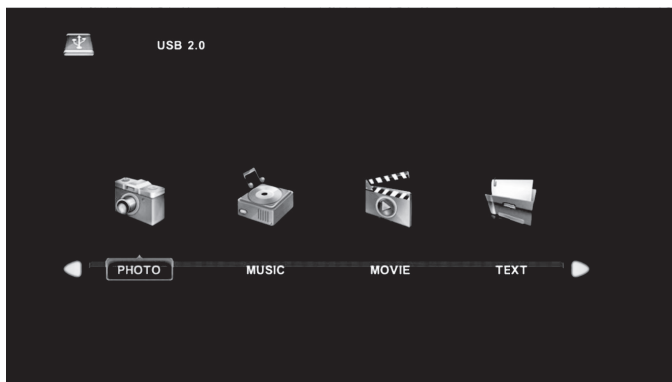

Media

Note: Before operating **Media** menu, Plug in USB device, then press INPUT button to set the Input Source to **Media**.

Press ▼ / ▲ button to select **Media** in the Source menu, then press **Enter** button to enter.

Press ◀ / ▶ button to select the option you want to adjust in the main **Media** menu, then press **Enter** button to enter.

Movie

Press ◀ / ▶ button to select MOVIE in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit. Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press **Enter** button to operate.

 
Press **Exit** button to back to the previous menu and exit button to quit the entire menu



MULTIMEDIA OPERATION


Music

Press ◀ / ▶ button to select MUSIC in the main menu, then press **Enter** button to enter.
Press **Exit** button to return to the previous menu and exit menu to quit.

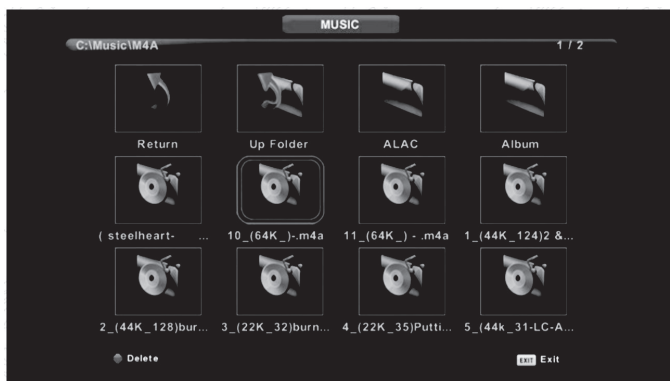

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

 Press ◀ / ▶ button to select return option to the previous menu.

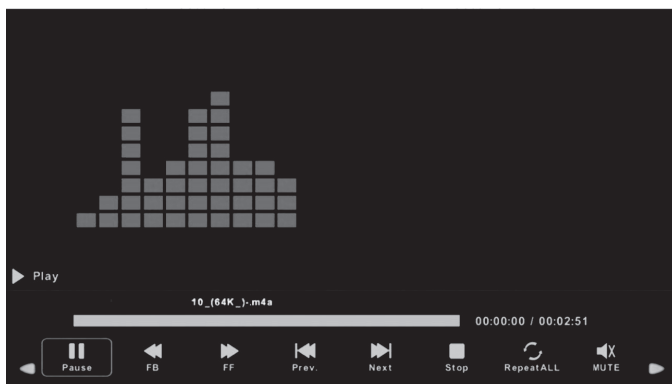


MULTIMEDIA OPERATION

Photo


Press ◀ / ▶ button to select PHOTO in the main menu, then press **Enter** button to enter.

 Press **Exit** button to return to the previous menu and exit menu to quit.

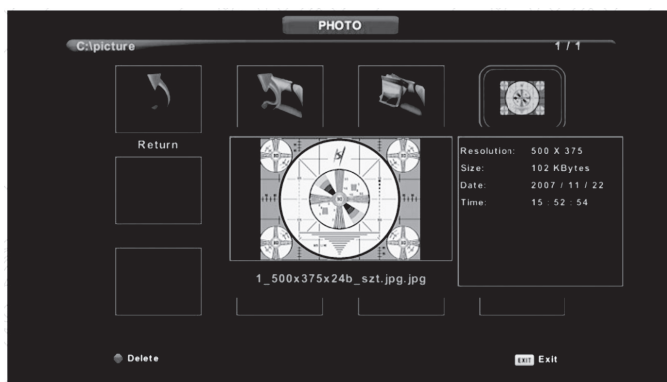


Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.

 When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

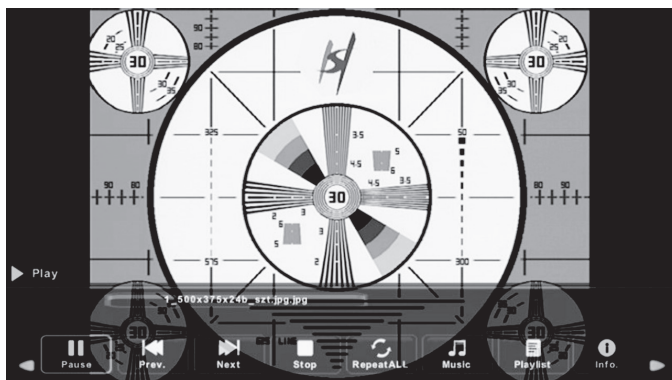

MULTIMEDIA OPERATION

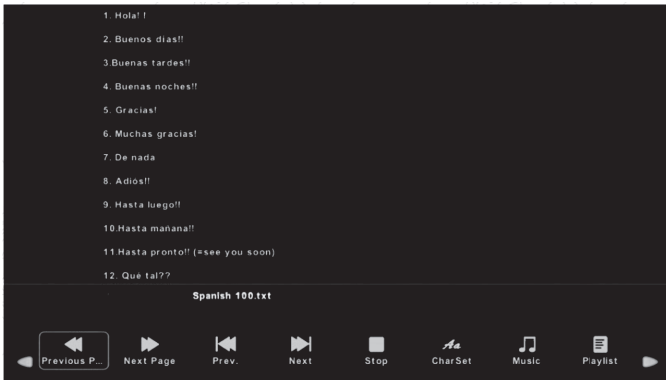 

Text

 
Press ◀ / ▶ button to select TEXT in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press ◀ / ▶ button to select return option to back to the previous menu.

CONTACT DETAILS

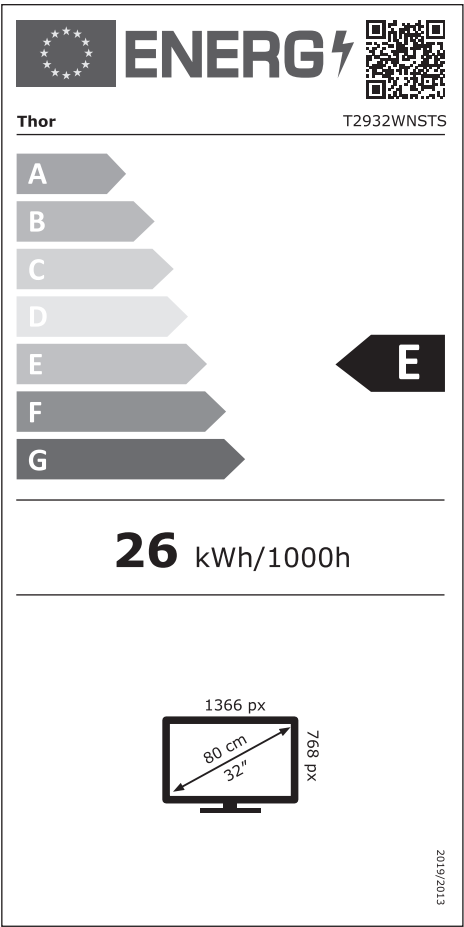

The after-sales service for your TV is located at the offices of the brand owner and distributor Shomar Ltd. To make contact please call us on 01-4505327 or service@shomar.ie